

Figure 1



Crown Automotive Sales Co., Inc.

**Fuel Module Float Arm Assembly Instructions
Replaces P/N: 5183202AA**

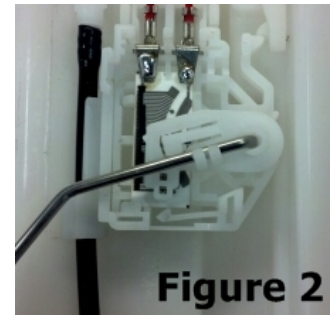


Figure 2

This fuel module ships with the arm detached from the module. To assemble float arm onto the fuel module insert the float arm into the hole (see Figure 1) and rotate the arm down so it engages the 2 clips on the bracket (see Figure 2). Ensure that it has a full range of motion and the float arm does not contact the body of the fuel module.

While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co., Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.

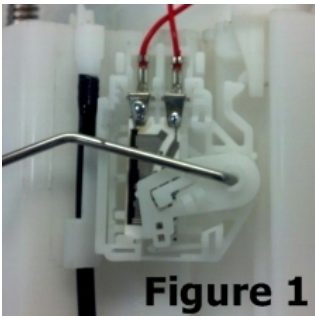


Figure 1



Crown Automotive Sales Co., Inc.

**Fuel Module Float Arm Assembly Instructions
Replaces P/N: 5183202AA**

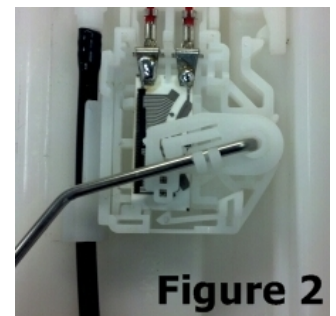


Figure 2

This fuel module ships with the arm detached from the module. To assemble float arm onto the fuel module insert the float arm into the hole (see Figure 1) and rotate the arm down so it engages the 2 clips on the bracket (see Figure 2). Ensure that it has a full range of motion and the float arm does not contact the body of the fuel module.

While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co., Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.

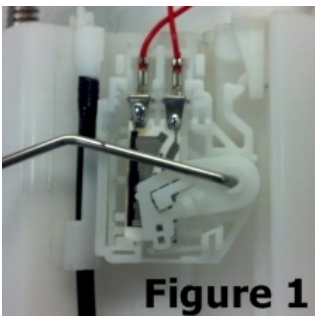


Figure 1



Crown Automotive Sales Co., Inc.

**Fuel Module Float Arm Assembly Instructions
Replaces P/N: 5183202AA**

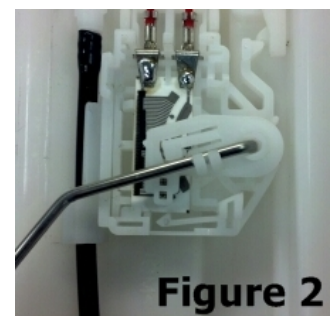


Figure 2

This fuel module ships with the arm detached from the module. To assemble float arm onto the fuel module insert the float arm into the hole (see Figure 1) and rotate the arm down so it engages the 2 clips on the bracket (see Figure 2). Ensure that it has a full range of motion and the float arm does not contact the body of the fuel module.

While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co., Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.