



Ready-to-Install Auto Upholstery & Carpet Kits  
Original, Restoration & Custom


1575 W. Broadway Ave., Anaheim, CA 92802

Tel: 800-235-8974 or 714-774-9506 Fax: 714-774-0788 Web: seatzmf.com

## Installation Instructions

### Jeep CJ/YJ/TJ Deluxe Carpet Kits - Glue-in Type

Congratulations on your purchase of this high quality Carpet Kit designed specifically for your Jeep Model!  
Please read the instructions below before you start to assure a good experience installing your new carpet.

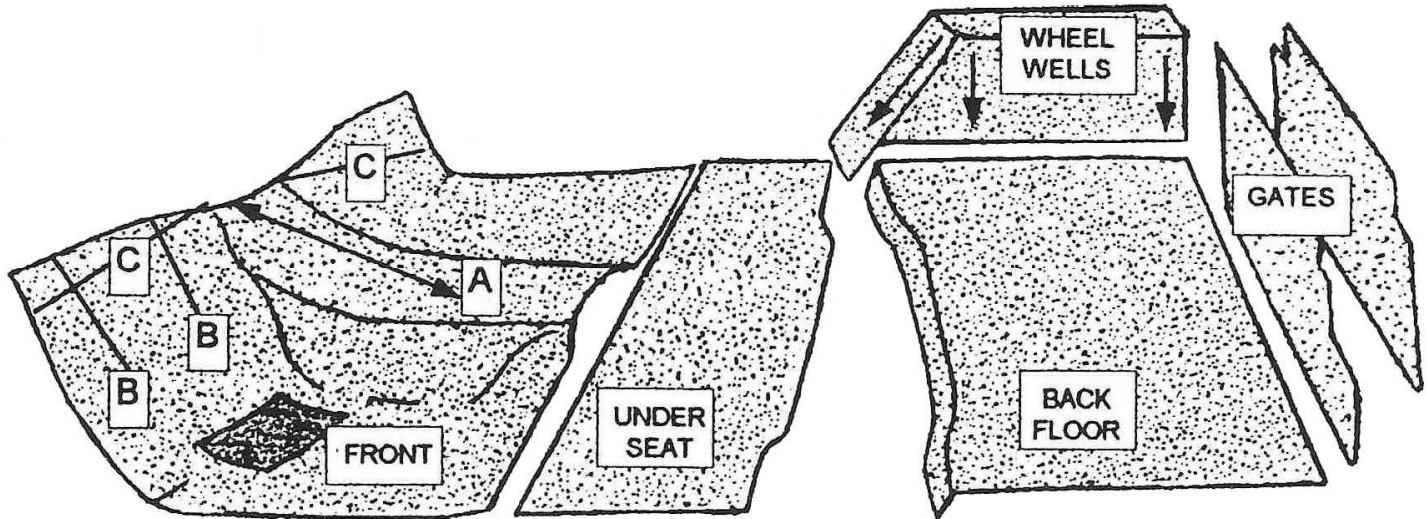

Your kit contains: patterned pieces as described above of Deluxe Automotive Carpet, Padding pre-installed in Critical areas, Spray Glue, razor blade (inside the glue can cap) and instructions. Check the product label description on the shipping box to make sure it matches your vehicle.

1. Layout and identify all the pieces. Smooth out any wrinkles. 5 or 6 pieces - Front, Underseat, Back Floor, and Right & Left Wheel Wells. Your Kit may also include a Rear Gate.
2. Remove the Seats, Seat Belts, etc. You may want to re-screw bolts back in the holes to find them easier after installation. Remove shift knobs, console and anything else that may get in the way of a smooth install. Remember what you did for the re-install!
3. Clean the Floor - this is very important! The carpet must stick to the floor and not the accumulated dirt!
4. Glue-in Tips - apply the spray glue to both surfaces, let dry for about a minute (depending on temp.) and apply. It doesn't take much glue and not all surfaces need glue. Don't make the mistake of using too much glue on the first pieces and running out before you finish! Smooth the carpet as you go.
5. Front Piece. Start installing here. Locate the proper position for needed cutouts for floor shifters by measuring the distance from firewall back to shift rods (A), then measure the same distance from the middle front of the carpet backwards (A) and cut small slits. Cut less versus more - you can always cut again! Push the shift rods through the slits and align the carpet front to back & side to side. During alignment try using weighted objects to hold the carpet in place. Enlarge slits as needed. Be careful as floor cutout positions can vary by model and year. Apply glue in sections starting near the shifters once you have the cutouts done. This piece is designed to cover as much of the firewall as possible so you may need to slit around cables (B) & cut away top sections (C) to accommodate Heater, Accelerator, etc.
6. Underseat Section - Align back edge to back "step" behind the seats. Tuck unfinished front edge under back of front carpet. Cut holes for seat belts, seat brackets, etc.
7. Back Floor - position the seam to the front edge of the "step", align and smooth to the rear. Relocate bolts and cut holes as needed.
8. Wheel Wells - Determine right from left and top from bottom - they are easy to confuse! Position the top, then stretch and smooth sides downward into place (see arrows). If applicable, cut around roll bar or remove bolts and slide carpet under the bolt plate.
9. Rear Gate - glue and/or screw on to the gate as desired. Your kit may have a CJ, YJ, TJ or Universal Gate (see box label).
10. Enjoy the fruits of your labor and the savings from Installing-it-Yourself!



Ready-to-Install Auto Upholstery & Carpet Kits  
Original, Restoration & Custom

1575 W. Broadway Ave., Anaheim, CA 92802

Tel: 800-235-8974 or 714-774-9506 Fax: 714-774-0788 Web: seatzmf.com

## Installation Instructions

### Jeep CJ/YJ/TJ Deluxe Carpet Kits - Removable Velcro-in or Snap-in Type

Congratulations on your purchase of this high quality Carpet Kit designed specifically for your Jeep Model!  
Please read the instructions on the other side of this page and the additional instructions below before you start to assure a good experience installing your new carpet.

Glue-in type kits are designed to be permanent and stable when installed.

Removable type kits, either Velcro-in or Snap-in, can be removed for off-roading, cleaning or during wet weather without a cab cover. These removable kits have the same design as their Glue-in counterparts so the seats and console must be removed first. Slits can be made in the carpet to allow removal of the carpet without removing the seats. The latex backing on the carpet will not allow cut edges to fray or run. Before slitting through the sewn edge binding yarn, put glue on the top and bottom of the binding where you intend to cut and let dry before you cut. This prevents the binding from unraveling.

Velcro-in tips: the Loop side is sewn to the under side of the carpet in various places. Once you have positioned the carpet pieces, clean the floor area thoroughly where you intend to put the Adhesive Backed Hook piece to match up with the Loop piece. Cut to the desired size, remove the paper backing and press to the floor. The adhesive is Pressure Sensitive so push hard and try not to reposition. The Pressure Sensitive Adhesive gains full strength after 24-36 hours and has only a small percentage of its strength when first applied. Apply at or near normal room temperature.

Snap-in tips: snap sockets have been installed in various places around the edge of the carpet (approx. 30). Once you have positioned the carpet pieces, install the snap screw studs into the floor to match up with the sockets. Drill a hole somewhat smaller than the screw diameter and screw in with a Phillips screwdriver.

Rear Gate: if your kit comes with a rear gate, whether you purchased a Velcro-in or Snap-in removable carpet kit, the rear gate will be attached with Velcro so follow the Velcro-in tips above.