



JEEP WRANGLER / RUBICON (TJ / YJ)
JEEP UNLIMITED (TJL)
ROCK SLIDER FRONT BUMPER
ROCK SLIDER FRONT BUMPER
W/ GRILLE GUARD

INSTALLATION INSTRUCTIONS
1987-95 YJ KIT # 83095
1987-95 YJ KIT # 83096
1997-04 TJ/TJL KIT # 83200

KIT # 83201

### **⚠ WARNING**

1997-04 TJ/TJL

Read and understand all instructions, warnings, cautions, and notes in this sheet and in your owner's manual before you install this kit.



# Before starting installation

### **⚠ NOTE**

Parts provided in this kit are prefaced by the word kit and appear in **bold** font.

- 1. Read all warnings and instructions completely and carefully before you begin.
- 2. Check to make sure the kit is complete (refer to the Kit Parts List at the end of this document).
- Only install this kit on the vehicle for which it is intended. If anytime during the installation you encounter something different from what is outlined in the instructions, call <u>technical support</u> at (928) 636-7080.


# Install kit

- 1. Stock front bumper.
  - a. Remove four torx bolts and tow hooks.
  - b. Remove two torx bolts from underside of bumper.
  - c. Remove stock bumper from vehicle.
- 2. Winch. (Skip this step if not installing a winch)

## **⚠ NOTE**

It is not possible to install winch with kit **bumper** installed.

- a. Set winch plate and winch in place.
- b. While lifting front of winch plate, set kit **bumper** on frame under winch plate.

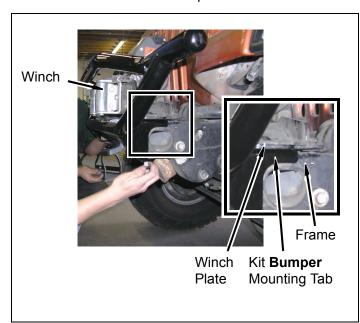

### Front kit bumper.

Install kit bumper on frame using original fasteners.

### **△** NOTE

If kit **bumper** mounting tabs fit tightly over frame, bend tabs with an adjustable wrench.

b. If not installing the optional Multi-Light Mount (87011) on the kit **bumper**, plug the holes with the kit **plastic caps**.

# **Accessories**

The following accessory is also available:

Kit # 87011: Multi-Light Mount



# **Kit Parts List**

Qtv. Description

- 1 **Bumper**, front
- 4 Cap, plastic

Rev. 01, Copyright 08/04 Performance Automotive Group