


# River Raider JK Tube Fender Installation Instructions



## JK Front Fenders Hardware List


- A. (12) 3/4" 1/4 20 SS hex cap screw
- B. (2) 3/4" 1/4 20 SS button head
- C. (4) 3/4" self tapper
- D. (2) 3" 1/4 20 SS hex cap screw
- E. (2) 4" 1/4 20 SS hex cap screw
- F. (2) 2.5" 1/4 20 SS hex cap screw
- G. (2) 5/8" aluminum spacer
- H. (2) 2.5" aluminum spacer
- I. (2) 1" aluminum spacer
- J. (40) flat washer
- K. (20) lock washer
- L. (20) 1/4" 20 nut

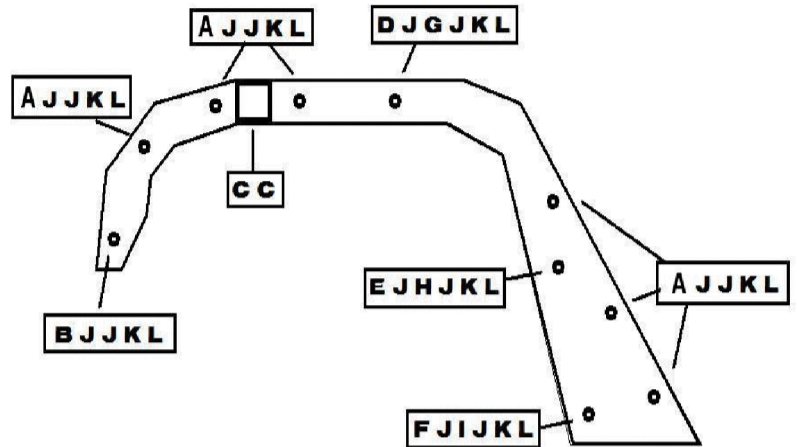

Letters on diagram correspond to hardware list to show what hardware to use at each attachment point.

## JK Rear Fenders Hardware List

- A. (18) 1" 1/4 20 SS hex cap screw
- B. (6) 3/4" 1/4 20 SS hex cap screw
- C. (18) well nuts
- D. (30) flat washers
- E. (6) lock washers
- F. (6) 1/4" 20 nut

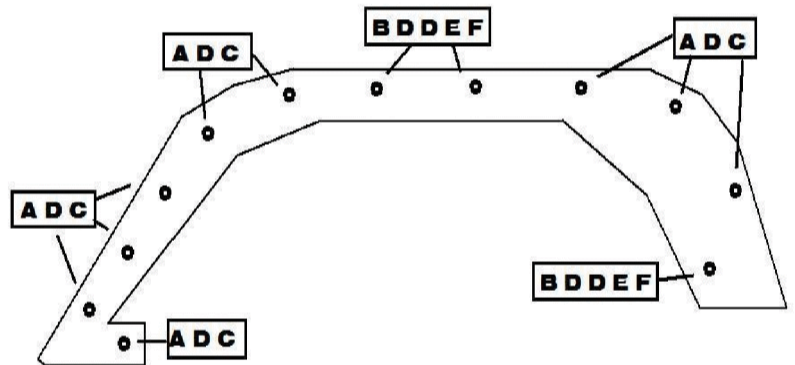

### INSTALLATION POINTS:

- Some factory holes may need to be drilled out larger for installation.
- The front fender requires three aluminum spacers that will need to be installed between the factory fender and sub frame. These locations require a hole to be drilled through the sub frame to allow the supplied bolt to pass through for a solid installation.
- To install the supplied well nut for the rear fender, a 1/2 inch hole must be drilled for the well nut to fit properly. Install well nuts and then mount fender.

- Self tapping screws are to be installed through the factory fender brace and into the new tube fender brace.
- GatorHyde finish is a polyurethane material that may be top coated with any polyurethane based paint. If nicks or gouges occur, it can be touched up with satin black rustoleum paint.