

**IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180**

**SEAT HANDLES**


**Time To Install: Approx. 20 minutes**

Tool Needed: Flat Head Screw Driver, T40 Torx Driver, Needle Nose Pliers, and a 1/16" Allen Key

**SEAT RECLINE HANDLES**



**PHOTO 1A**

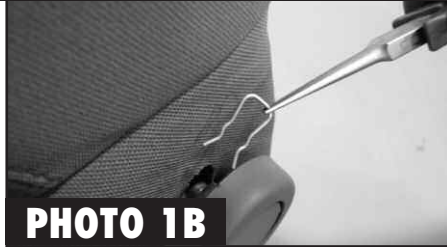

**PHOTO 1B**



**PHOTO 1C**

**1.** Begin by using a set of needle nosed pliers to locate and remove the retaining clip behind the seat handle (See Photo 1A & 1B). Remove the factory handle (1C).



**PHOTO 2A**



**PHOTO 2B**



**PHOTO 2C**

**2.** Your new billet handle has a set screw in the backside of the handle. Align the handle back onto the factory post (See Photo 2A) and tighten using a 1/16" allen key (See Photo 2B). Repeat for the other side and you're finished (See Photo 2C).

**SEAT ADJUSTMENT HANDLE**



**PHOTO 1**

**1.** Begin by removing the factory plastic cover located in the center of the seat handle.



**PHOTO 2A**

**2.** By using a T40 Torx driver, remove the center bolt (See Photo 2A). Now you can remove the handle (See Photo 2B).



**PHOTO 2B**



**PHOTO 3A**



**PHOTO 3B**



**PHOTO 3C**

**3.** Align your new billet handle in place and reinsert the factory bolt (See Photo 3A). Tighten back up by using a T40 Torx driver (See Photo 3B), and you're finished (See Photo 3C).

**RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031**

**847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180**