


04-2630

Installation Instructions for JK Warrior 2DR Side Windows

Install side windows. Start with the side closest to the cockpit. Label should be facing out. Attach all 6 buckles making sure to go under the seatbelt. The top strap should come up around the **top** of your roll cage.

For 2007 – 2010 models.

The back bottom strap, bring this strap through the opening in the seatbelt retractor box and slide it under the plastic and bring strap around and tighten. Tighten and adjust all straps.

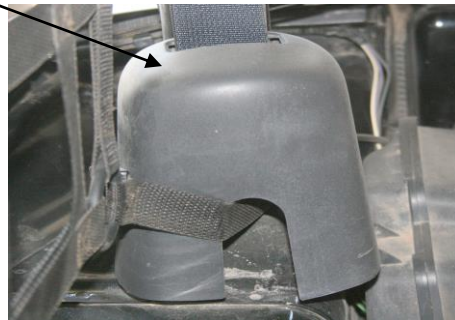

For 2011 -2016 Models.

Bottom rear strap is longer than the others. Bring this strap around the seatbelt retractor box, and bring down the loop through the d-ring in the cargo floor.



(Inside view looking out.)

Adjust and tighten nets all around.
Slip the excess strap through the slip keepers.