




Protecting Your Adventure Lifestyle

Warrior, Inc.
16850 SW Upper Boones Ferry Rd
Ste. A
Durham, OR 97224
Phone: (888) 220-6861
Fax: (503) 692-0364
sales@warriorproducts.com
www.warriorproducts.com

ALUMI-ROLLERS REPLACEMENT FAIRLEAD ROLLERS INSTALLATION INSTRUCTIONS WAR 2300 SERIES

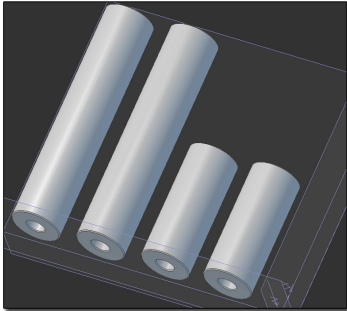

Part Numbers:

pn2300 – Fits 7.875" wide fairleads; commonly found on Warn brand fairleads

pn2310 – Fits 7.5" wide fairleads; commonly found on Ramsey, MileMarker, T-Max, Superwinch & Warn brand fairleads

pn2320 – Fits 8" wide fairleads; commonly found on Superwinch S6000, S9000, X6CD & X9 models

Phase 1: Roller Removal

1. This can be done on vehicle with most vehicles but is easiest to do on a workbench with the fairlead uninstalled.
2. Remove the clips holding the vertical two roller pins into place and slide roller pins out.
3. Remove the vertical rollers.
4. Remove the clips holding the horizontal two roller pins into place and slide roller pins out.

Phase 2: Alumi-Roller Installation

1. This is as simple as reversing steps.
2. Install the horizontal rollers first. Slide them into place, install the pin, and install the snap ring.
3. Install the vertical rollers second. Slide them into place, install the pin, and install the snap ring.

Installation is completed.

Visit www.warriorproducts.com to see more of our Jeep Cherokee Accessories. If you need further assistance installing your product, please contact us by email at techsupport@warriorproducts.com or call us at (888) 220-6861.

THANK YOU FOR PURCHASING WARRIOR PRODUCTS

QUALITY • INTEGRITY • INNOVATION • SERVICE