


131040

07-10 JEEP JK 2 DR FULL RACK EXTENSION

**OFF CAMBER
FABRICATIONS**

by: **MBRP** INC.

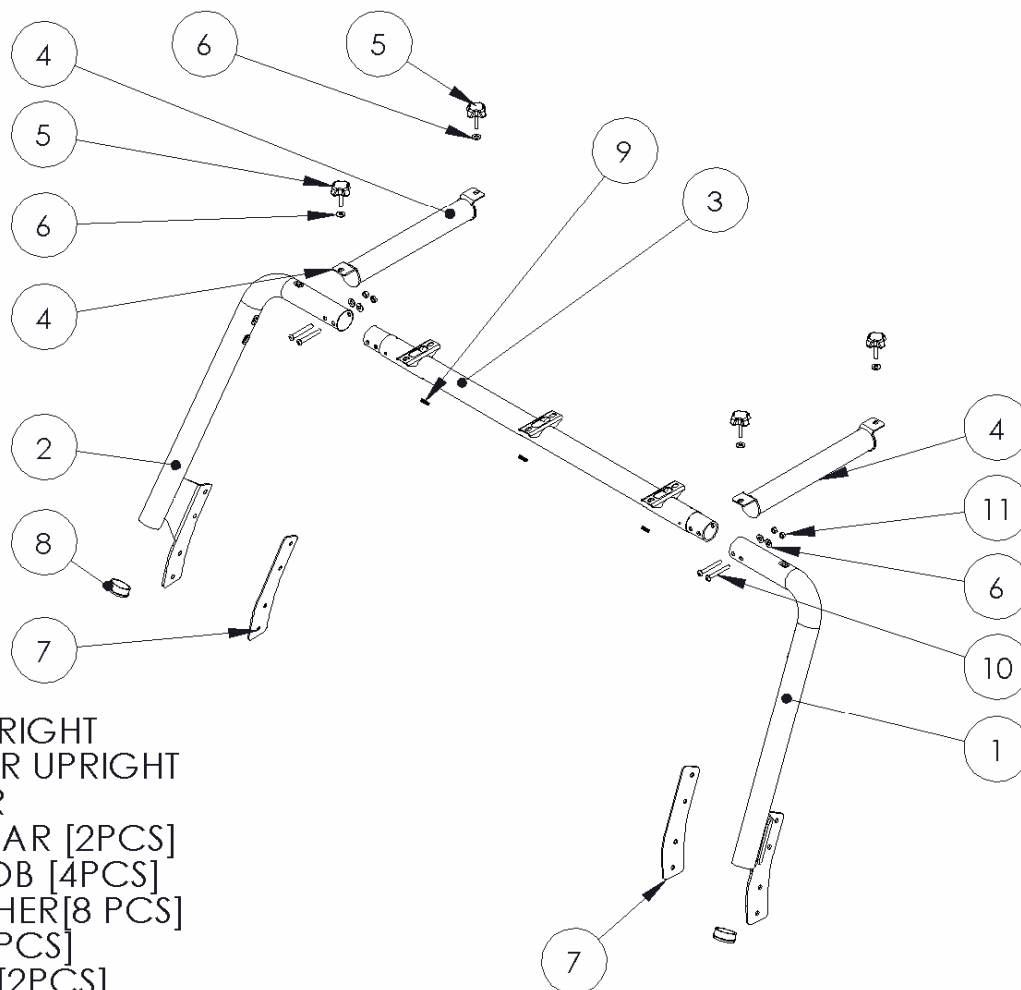

1. DRIVER UPRIGHT
2. PASSENGER UPRIGHT
3. CROSSBAR
4. SUPPORT BAR [2PCS]
5. HAND KNOB [4PCS]
6. 5/16" WASHER [8 PCS]
7. GASKET [2PCS]
8. TUBE CAP [2PCS]
9. GROMMET [3PCS]
10. 5/16" BUTTON HEAD BOLTS [4 PCS]
11. 5/16" NYLOC NUTS [4 PCS]

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this kit are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before starting:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the kit you have purchased is appropriate for your year and model of vehicle.
- that the kit will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this kit on your vehicle please contact your dealer before commencing installation.

OFF CAMBER FABRICATIONS

by: *MBRP* INC.

2007-2010 Jeep JK 2dr Full Rack Extension Kit

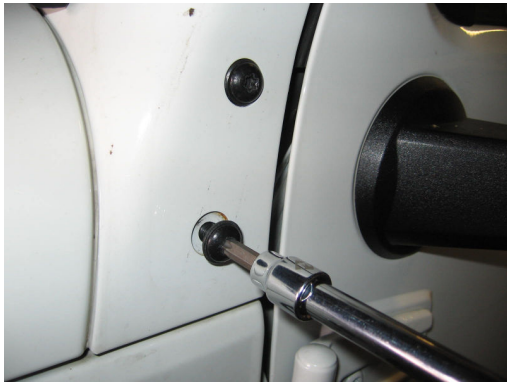


Figure 1

NOTE:

This kit requires the installation of **Off Camber Fabrications** Roof Rack Kit # 130927 prior to installation of this Full Rack Extension Kit # 131040.



Figure 2

1. Install the five **Grommets** into the wiring holes on the underside of the **Windshield Hoop**.

2. Remove the four Torx headed fasteners from the left and right side windshield brackets. Keep these fasteners, you will reuse them.

Refer to Figure 1.

3. Loosely install the **Driver Upright** and **Passenger Upright** to the Jeep with the previously removed Torx head fasteners. Be sure to install the **Gaskets** between the body and the **Uprights**. Install the **Front Crossbar** between the **Uprights** and secure with the supplied **5/16" x 2.5 Bolts**, **5/16" Washers**, and **5/16" Nyloc Nuts**. Be sure the wiring holes are facing forward. Do not fully tighten yet.

Refer to Figure 2.



Figure 3

4. The **Support Bars** attach to the **Windshield Hoop**, and the previously installed **Roof Rack** with the supplied **Hand Knobs** and **5/16" Washers**. The **Windshield Hoop** may need to be adjusted to help align the **Support Bars**.

Refer to Figures 3 and 4.

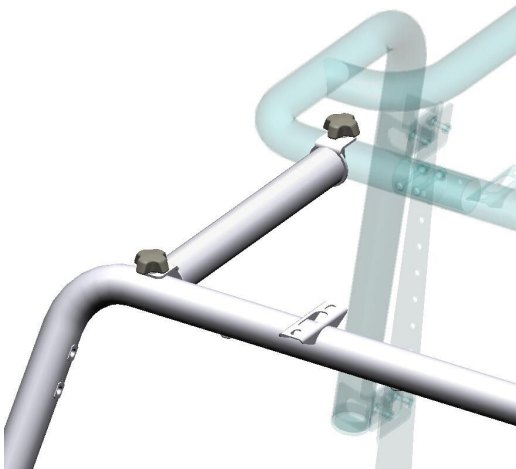


Figure 4



Figure 5

5. Tighten the eight [four per side] Torx fasteners starting from the top and working down. The surface of the Jeep is not flat. The fasteners must be tightened in this order to allow the mounting brackets to fit correctly.

Refer to Figure 5.

6. Install the **Tube Caps** with a soft faced hammer.

Installing/Removing the Freedom Roof Panels.



Figure 6

The Freedom Roof Panels can still be removed with the **Rack Extension Kit** installed.

1. Release all clips/screws holding both roof panels in place. Shift the passenger side panel as far to the right as possible. Refer to Figure 6.



Figure 7

2. Remove the driver side panel first by rotating counterclockwise and sliding the panel downward/rearward in the 5'o'clock direction.

Refer to Figure 7.

OFF CAMBER FABRICATIONS

by: **MBRP** Inc.

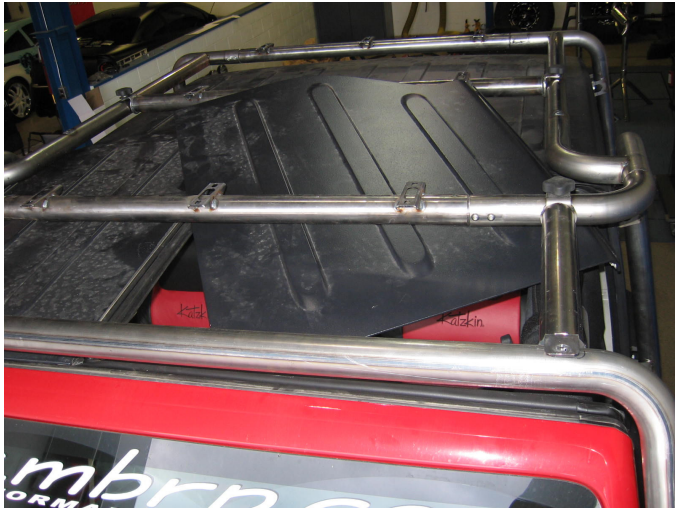


Figure 8

3. The driver side panel can now be removed between the 2 crossmembers as shown
Refer to Figure 8.



Figure 9

4. The passenger side panel can now be removed by sliding towards the center of the Jeep, and then removed between the crossmembers similar to the driver side panel in step 3.
Refer to Figures 9.

Congratulations! You are finished. We are sure that you will enjoy this

Off Camber Fabrications product by ***MBRP Inc.***