

WeatherTech®

No-Drill MudFlap

Installation Instructions

Thank you for purchasing the WeatherTech® No-Drill MudFlap. Please read this installation guide to thoroughly familiarize yourself with the steps to install the MudFlap on your vehicle. When properly installed, the WeatherTech® No-Drill MudFlap will provide you with years of protection.

Tools Needed



- Ratchet Socket Set

Hardware



Parts Kit (F)
(1) Hex Key

⚠ WARNING ⚠

The MudFlap is designed to fit vehicles with standard size wheels and tires. Installation of MudFlaps on vehicles with aftermarket wheels or oversize tires may interfere with the MudFlap, will void the warranty and may damage the MudFlap or the vehicle.

- 1 Start by thoroughly washing your vehicle. Take care to remove all dirt, debris, and stains from each fender in the areas corresponding to where the MudFlaps will be installed.

- 2 Begin driver's side MudFlap installation by parking the vehicle on level ground with wheels turned fully to the left.



- 3 Locate the fasteners holding the plastic fender guard to the fender.



- 4 Using the appropriate socket or nut driver, remove these fasteners. They will be reused later.

View Easy Installation Video
WeatherTech.com/install


Questions? Call customer service at 630 769 1500
Monday - Friday: 9 a.m. to 5 p.m. Central Time



- 5** Identify the driver's side MudFlap by the "LH" mark located on the front side of the MudFlap. Place the MudFlap in place on the fender. Line up the holes in the MudFlap with the holes in the plastic fender guard.



- 6** Using the previously removed screws, replace these at this time. Do not fully tighten.

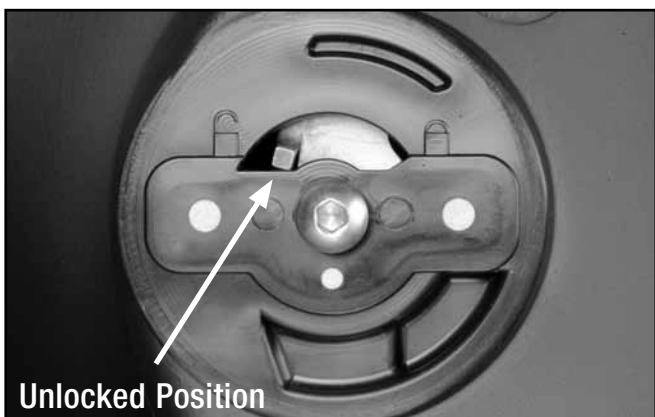

- 7** Locate the QuickTurn™ fastener on the MudFlap. Ensure that the QuickTurn™ fastener is in the fully unlocked position using the hex key provided.



- 8** While pressing the MudFlap against the fender for a tight fit, tighten the QuickTurn™ fastener with the hex key. Make sure the indicator moves to the locked position and then continue tightening until snug.

Congratulations!



- 9** After tightening the QuickTurn™ fastener, tighten the (2) hex head screws while pressing the MudFlap against the fender. For passenger side, turn front wheels fully to the right and repeat steps 1-9.



**Your new
WeatherTech®
No-Drill
MudFlaps have
been installed!**

Your WeatherTech® No-Drill MudFlap carries a Lifetime Warranty against defects in materials and workmanship when installed correctly.

View Easy Installation Video
WeatherTech.com/install

Questions? Call customer service at 630 769 1500
Monday - Friday: 9 a.m. to 5 p.m. Central Time