



J0750LR INSTALLATION INSTRUCTIONS



Hardware Kit Contains:

- (2) 1 1/2" Closed End Caps
- (2) 1 1/2" Open End Caps

Recommended Tools:

- 3/8" Ratchet
- Torx T40 Socket

Please read each step completely before attempting installation.

Step 1: Remove the five Torx Bolts on the drivers side as shown in Figure 1.

Step 2: Repeat Step 1 for the passenger side.

Step 3: Install each side bracket by using the five Torx Bolts that were removed in Step 1. Do not fully tighten the Torx Bolts until the connecting tube is installed.

Step 4: Push on the Open End Caps that were supplied with the Hardware Kit as shown in Figure 2.

Step 5: Install the 50" LED using the hardware supplied with the LED Light.

Step 6: Tighten the bolts LED Light followed by the Torx Bolts that hold each side bracket.

Step 7: Push in the Closed End Caps that were supplied with the hardware kit as shown in Figure 3.

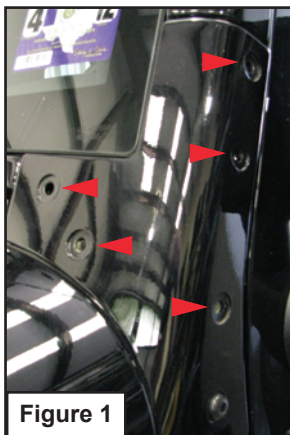


Figure 1

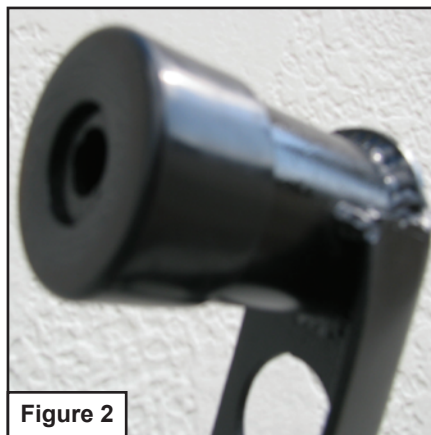


Figure 2

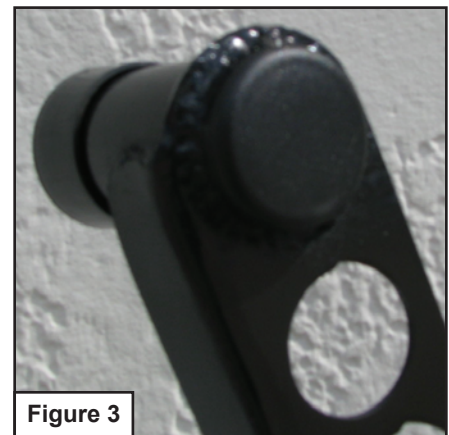


Figure 3

For Technical Support Please Call 281-880-6322