



JK Crusher Corners™

IMPORTANT: Thank you for purchasing this Poison Spyder product. Please read through this entire document before proceeding with installation. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Check your packages immediately upon arrival to ensure that everything listed is included, and to check for damage during shipping. If anything is missing or damaged, or if you need technical assistance with any aspect of this installation, call Poison Spyder at (951) 849-5911 as soon as possible. This document last updated July 2015.

APPLICATIONS

These installation instructions apply to the following Poison Spyder products:



- 17-05-020** JK 2-Dr Crusher Corners STD - LED Taillights (shown above)
- 17-05-021** JK 2-Dr Crusher Corners STD - LED Taillights & Back-Up Lights
- 17-05-022** JK 2-Dr Crusher Corners - OEM Taillights
- 17-05-024** JK 2-Dr Crusher Corners STD - NO Light Cutouts
- 17-05-025** JK 2-Dr Crusher Corners EXT - LED Taillights
- 17-05-026** JK 2-Dr Crusher Corners EXT - LED Taillights & Back-Up Lights
- 17-05-029** JK 2-Dr Crusher Corners EXT - NO Light Cutouts
- 18-05-020** JK 4-Dr Crusher Corners - LED Taillights
- 18-05-021** JK 4-Dr Crusher Corners - LED Taillights & Back-Up Lights
- 18-05-022** JK 4-Dr Crusher Corners - OEM Taillights
- 18-05-024** JK 4-Dr Crusher Corners - NO Light Cutouts

NOTE: 2-Door Crusher Corners come in either Standard (STD) or Extended (EXT) versions. "Extended" JK 2-Door Crusher Corners are made with the front section extending all the way down to the bottom of the body tub, between the door opening and the wheel opening. They are NOT compatible with Poison Spyder JK Body Armor or Brawler Rockers.

PARTS LIST

- (1) Right Side JK Crusher Corner
- (1) Left Side JK Crusher Corner
- (1)* JK 2-Dr Crusher Corner Hardware Kit
PN: HWKIT-17-04-020 includes:
 - (35) 1/4-20 X 3/4 SS Button Head Cap Screw†
 - (35) 1/4-20 Nut-Sert†
 - (1) 1/4" Nut-Sert Install Tool - includes:
 - (1) 1/4-20 X 2 Gr8 Hex Head Cap Screw

- (2) 1/4" SAE Hardened Flat Washer
- (1) 3/8-16 X 1-1/8 Coupling Nut
- (1) 1/4-20 Nut-Sert

†Extended versions of 2-Door Crusher Corners require 35 each of Button Head Cap Screws and Nut-Serts. The Standard versions require only 31 of each, so there will be left-over hardware.

- (1)* JK 4-Dr Crusher Corner Hardware Kit
PN: HWKIT-18-04-020 includes:
 - (27) 1/4-20 X 3/4 SS Button Head Cap Screw
 - (27) 1/4-20 Nut-Sert
 - (1) 1/4" Nut-Sert Install Tool - includes:
 - (1) 1/4-20 X 2 Gr8 Hex Head Cap Screw
 - (2) 1/4" SAE Hardened Flat Washer
 - (1) 3/8-16 X 1-1/8 Coupling Nut
 - (1) 1/4-20 Nut-Sert

*Includes ONE of the Hardware Kits (not both)

TOOLS NEEDED

- Phillips head & small flat head screwdrivers
- Welding clamps or C-clamps
- Measuring tape
- Drill motor, 1/4" & 25/64" drill bits
- Fine tip felt marker
- Touch-up paint or clear coat
- 5/8" open end wrench
- 5/32" hex key or driver bit
- 2-3/4" hole saw (optional, if installing 2-1/2" LED back-up lamps)
- OPTIONAL: Professional Nut-Sert Install Tool

INSTALLATION PROCEDURE

- 1. Park vehicle on a level** surface and set the emergency brake. You will want to wear eye protection beyond this point in time.
- 2. Begin with the driver's side** Crusher Corner installation. The procedure for both sides is nearly identical, with a few small differences, which will be denoted in the following steps.
- 3. Remove the license plate and** license plate mount. The wiring for the license plate light will need to be unplugged.



4. **Use a Phillips screwdriver to** remove the stock taillight assembly from the Jeep. Note that there are four screws, one in each corner of the taillight housing. You only need to remove the two inboard screws. Once these two screws are removed, grip the taillight assembly, slide it slightly toward the center of the Jeep and pop it out.



5. **With your thumb, press on** the release tab of the taillight harness plug, and separate it from the vehicle harness. Set the OE taillight assembly aside.



NOTE: The next 3 steps pertain to Crusher Corners with LED taillight holes or no taillight holes. If installing Crusher Corners made for use with the stock taillights, skip the next 3 steps.

6. **Observe the Jeep's body sheetmetal** around the taillight opening. Note that there are two raised areas in the upper right and lower right corners (for the driver's side taillight-opposite for the passenger side), where the threaded inserts for the taillights are installed. These

raised areas, along with the indented flange section between them along the right vertical edge of the taillight hole, will have to be removed for proper fitment of the Crusher Corner and clearance for the LED taillight. Use a fine-tip felt marker to outline the area to be removed, as shown in Figure 3.



7. **Use the tools of your choice** to cut the body sheetmetal along your cut mark. Note that part of the cut goes through double-thick sheetmetal and may be difficult to get through. A pneumatic body saw or cut-off wheel may be ideal for this task.



8. **Use a file or sander** to smooth the edges of the cut sheetmetal. It is important to remove any burrs or sharp edges which may snag, fray or cut electrical wires over time. Use some touch-up paint or clear-coat to seal the bare metal around the edge of the cut, to protect it from rust in the future.



- 9. Place masking tape around the** edges of the area the Crusher Corner will cover, to protect the Jeep's paint during the installation process.



- 10. Place the driver's side Crusher Corner** over the corner of the Jeep. The Crusher Corner will slip snugly over the fuel filler trim piece (and stock taillight housing, if present), assisting with aligning it. Use a measuring tape to ensure that the distance between the top edge of the Crusher Corner and the top edge of the Jeep's tub is the same from front to back, and securely clamp the Crusher Corner into place.



It is extremely important to ensure that the Crusher Corner is securely clamped into place, that it won't "walk" or loosen the clamps once you begin drilling.

- 11. Use the 5/16" bit and** drill motor to drill through the Jeep's outer sheetmetal at each of the hole locations in the Crusher Corner, using the Crusher Corner itself as your drill guide. If the Crusher Corner shifts or the clamps loosen while you're drilling, stop drilling and re-align the Crusher Corner and re-clamp it, making sure it still aligns with the holes already drilled.




- 12. If installing Crusher Corners with** holes for 2-1/2" backup lamps, use the fine-tip felt marker to mark these holes to be cut later.
- 13. Un-clamp and remove the Crusher Corner**, then use the 25/64" drill bit to open up each of the holes to the larger size. Be careful when drilling, as the thin sheetmetal may want to catch on the bit and deform it, making the subsequent nut-sert installation more difficult.



- 14. If installing Crusher Corners with** holes for 2-1/2" backup lamps, cut these holes now at the locations that were marked in Step 9. A 2-3/4" hole saw works best for this.
- 15. Install a 1/4-20 nut-sert into** each of the holes that were drilled out to 25/64".

NOTE: It is HIGHLY RECOMMENDED to invest in a professional nut-sert installation tool, such as the one sold by Poison Spyder (p/n: 70-TS-325-RN) or elsewhere.

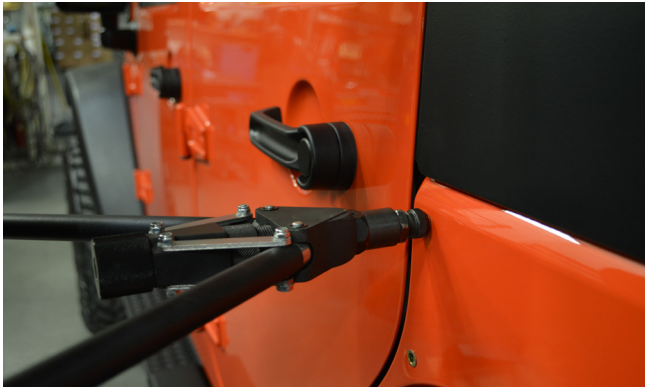

The professional tool will make the installation of nutserts MUCH easier than using the free tool included in this kit, and it will come in handy with future product installations as well. If using a professional nutsert installation tool, follow the directions that came with the tool and skip the next three steps of these instructions. The simple “tool” included with this product is admittedly frustrating to use, however it will work for those with patience who would like to save the cost of the professional tool. If using the simple tool included with this product, continue through the following steps:

16. The provided nutsert install tool consists of a bolt, two washers and a coupler (long) nut. Assemble these items as shown (bolt—washer—coupler nut—washer—nutsert). Insert the nutsert end of the assembly into the hole you drilled.



17. Use an open end wrench to hold the coupler nut stationary while turning the head of the bolt clockwise with a ratchet (or small impact wrench) and socket. As you turn the ratchet, the bolt will draw the far end of the nutsert toward the inside of the sheet metal, gripping it with the knurled outside edge of the nutsert as it deforms. Continue to turn the ratchet until the nutsert is fully seated. DO NOT OVER-TIGHTEN as you can damage the nutsert, or cause it to lose its grip.



18. Once the nutsert has seated correctly, loosen the bolt then remove it and the rest of the tool from the nutsert. Install a new nutsert onto the tool, oriented the same as the last, and set it aside until your next nutsert installation.



19. With the tool removed, inspect the nutsert to make sure it is properly seated and that the surrounding sheet metal isn't excessively deformed. Note that some deformation of the sheet metal is normal, and that it will be covered by the part after installation.



If you “spin” a nutsert: That is, if it loses its grip due to over-tightening or improper installation, the quickest, easiest fix is to use a MIG welder to place a small tack weld at the edge of the nutsert flange. Before applying the tack weld, sand or grind the paint from a very small area of the sheetmetal where the tack weld will be. Then insert a screw into the nutsert to protect the threads from weld splatter. Only apply a very small tack or two, as you do not want to heat up and deform

the nut-sert or the sheetmetal. Then grind the tack(s) smooth and apply touch-up paint to prevent rust.

20. Repeat the previous steps for the passenger side.

You will not have the fuel filler trim piece to help you align the Crusher Corner on the passenger side, so you will have to be even more careful with your measurements to ensure that the Crusher Corner is on straight when you clamp it firmly in place.

21. Paint or powder-coat the Crusher Corners. If painting them yourself, be sure to use a quality etching primer, followed by the paint color of your choice. It is important to make sure the inside surfaces of the Crusher Corners are properly coated to ensure against rust.

22. Re-Install the finished Crusher Corners using the supplied stainless steel button head hardware.

IMPORTANT! Do NOT over-tighten the button head cap screws, as you may accidentally “spin” the Nut-Sert if you over-tighten!

23. If re-using the OE taillights and license plate mount, reinstall them by reversing the removal procedures from the beginning of these instructions.



24. If installing the Crusher Corners designed for the stock taillights, and you are using the stock license plate mount, reinstall it. If moving the license plate to a different location such as the center of the spare tire, Poison Spyder's JK Rear License Plate Delete Cover (p/n 17-04-112, sold separately) may be used to fill the hole left by removing the stock license plate mount.

25. If installing LED taillights, follow the instructions that came with them for proper wiring.

Congratulations, you have completed the installation of your Poison Spyder JK Crusher Corners!