


97-2006 Jeep TJ Dash Panel Installation Instructions 90010/90011

Remove the 3 screws from the back of the bezel (closest to the windshield) Keep them, they will be reused in the installation of your new GaugeWorks bezel

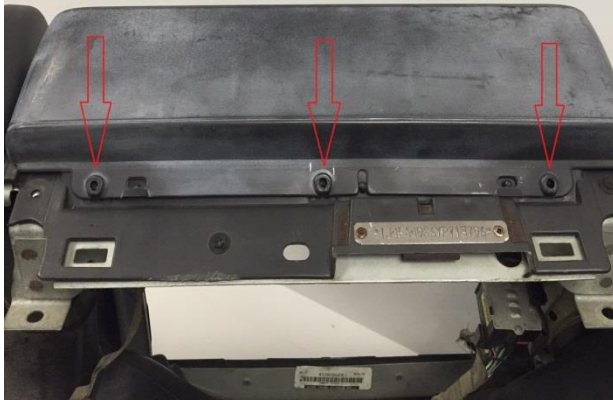

Remove and retain the front bezel screws located below the bezel in the lower right and left corners




Remove the 4 screws securing the instrument cluster



Remove the 2 factory wire harness clips by pushing the side tabs in and sliding clip down (A) NOTE: these are the harnesses where you will need to locate and wire in your signals, high beam, etc.


Push black plastic fastener through metal releasing wire harness (B)

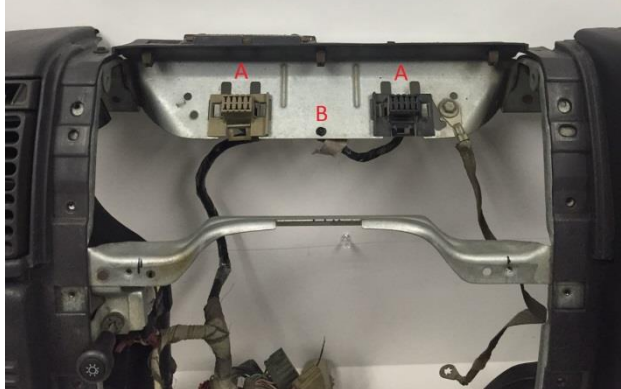

97-2006 Jeep TJ Dash Panel Installation Instructions 90010/90011

Push the side tabs in and slide clip down to remove from sheetmetal

Do not reinstall clips into dash after you have finished your wiring. The clips will interfere with your new gauges. Secure by zip tying out of the way

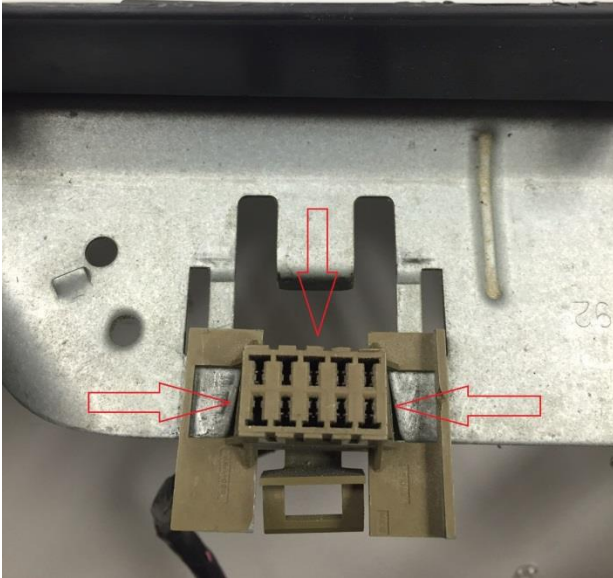

Mount your new GaugeWorks dash. Install the 3 factory screws you saved on the back of the bezel. NOTE: It is important to install these first



Using 2 of the factory screws, install them into the lower tabs securing the bezel to the dash

For customers who are installing part # 90010. The upper right and left cut-outs are designed to fit Carling Technologies V-Series: *Contura* rocker switches

