




Ready-to-Install Auto Upholstery & Carpet Kits
Original, Restoration & Custom

1575 W. Broadway Ave., Anaheim, CA 92802
Tel: 800-235-8974 or 714-774-9506 Fax: 714-774-0788 Web: seatzmfg.com

Installation Instructions

Suzuki Samurai Deluxe Carpet Kit

Congratulations on your purchase of this high quality Carpet Kit from your favorite Auto Access. Retailer!
Please read the instructions below before you start to assure a good experience installing your new carpet.

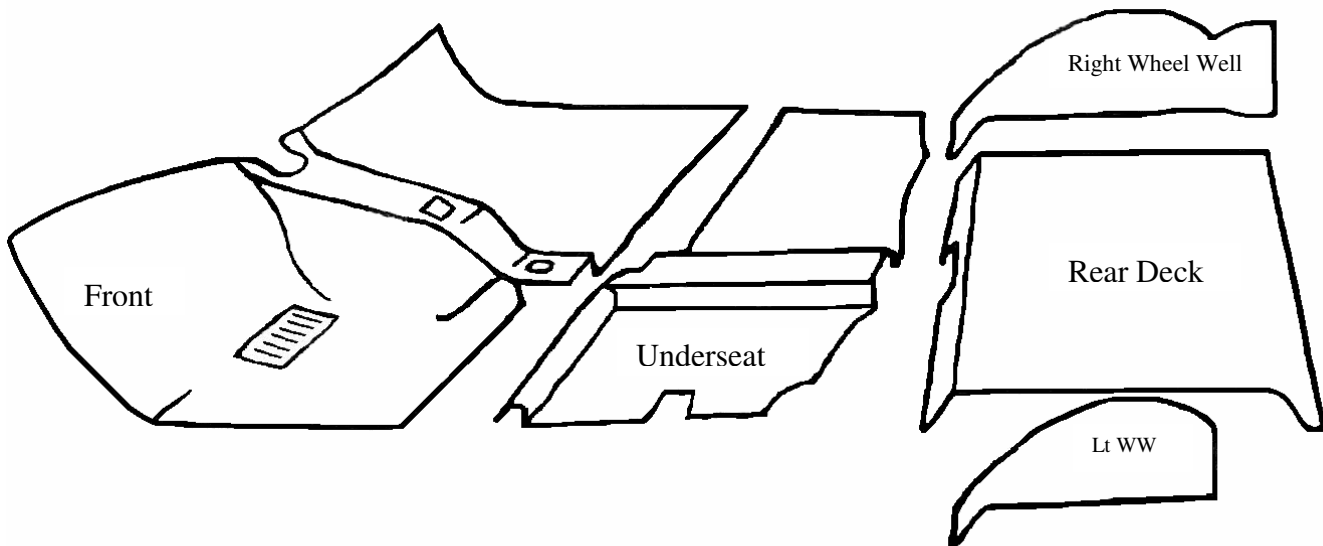

Your kit contains: 5 patterned pieces of Deluxe Automotive Carpet with Latex backing, Padding pre-installed in critical areas, Spray Glue, razor blade (inside the glue can cap) and instructions. Check the product label description on the shipping box to make sure it matches your vehicle.

1. Layout and identify all the pieces. Smooth out any wrinkles.
2. Remove the Seat and anything else that may get in the way of a smooth install. Remember what you did for the re-install!
3. Clean the Floor - this is very important! The carpet must stick to the floor and not the accumulated dirt!
4. Glue-in Tips - apply the spray glue to both surfaces, let dry for about a minute (depending on temp.) and apply. It doesn't take much glue and the entire surfaces do not need glue. Don't make the mistake of using too much glue on the first pieces and running out before you finish! Smooth the carpet as you go.
5. Front Piece. Start installing here. You will need to locate the proper position for needed cutouts for floor shifters. The back side of your carpet may be marked depending on the model year. Be careful as floor cutout positions on your model may be different versus the markings. It is very important to validate the proper cutout position! Make sure the carpet covers evenly to both sides and up the firewall. Cut an "X" to provide enough room to slip the carpet over the shifters. Cut less versus more - you can always cut more later! Apply glue in sections starting near the shifters once you have the cutouts done.
6. Underseat Section - position the underseat piece with the finished front edge overlapping the back edge of the front piece. Also position the parking brake boot properly. Mark holes for the bolts.
7. Rear Deck - position the carpet to the floor. Some edge trimming may be necessary, use the enclosed razor blade. If you need to trim finished edges due to roll bars, etc, apply a small amount of glue to the binding to prevent unraveling (not necessary with raw carpet edge).
8. Wheel Wells - Determine right from left and top from bottom by testing in the vehicle. Stretch and smooth sides downward into place.
9. Enjoy the fruits of your own labor and the savings from Installing-it-Yourself!